



ALVIUM FPD-LINK III / GMSL2 STP CAMERAS

# HSD STP Cables

## User Guide

V1.0.3

**Quick links**

- [This document at a glance](#) on page 7
- [Contact us](#) on page 9
- [Contents](#) on page 10

# Read before use

## EN - English

### Safety

Before using the product, read these safety instructions. Observe the warnings at all times. Use the product only as stated in the [Intended use](#) on page 14.

### Intended use

Intended use of Allied Vision product is the integration into vision systems by professionals. All Allied Vision product is sold in a B2B setting.

## DA - Dansk

### Sikkerhed

Læs sikkerhedsanvisningerne, før produkt bruges. Overhold alle advarsler. Brug kun produkt som anført i [Intended use](#) på side 14.

### Tilsigtet brug

Allied Vision produktets tilsigtede brug er en indbygning i et visionssystem, udført af fagfolk. Alle Allied Vision produkter sælges i B2B.

## DE - Deutsch

### Sicherheit

Bevor Sie das Produkt benutzen, lesen Sie diese Sicherheitshinweise. Beachten Sie diese Hinweise immer. Verwenden Sie das Produkt nur wie beschrieben in [Intended use](#) auf Seite 14.

### Bestimmungsgemäßer Gebrauch

Allied Vision Produkte sind bestimmt für die Integration in Bildverarbeitungssysteme durch Fachpersonal. Alle Allied Vision Produkte werden in einer B2B-Umgebung verkauft.

## ES - Español

### Seguridad

Antes de utilizar el producto lea estas instrucciones de seguridad. Observe las advertencias en todo momento. Utilice el producto solo tal y como se estipula en el [Intended use](#) en la página 14.

### Uso previsto

El uso previsto del producto Allied Vision es la integración en el sistema de visión por parte de profesionales. Todos los productos Allied Vision se venden dentro de una relación B2B.

## FI - Suomi

### Turvallisuus

Lue nämä turvallisuusohjeet ennen tuotteen käyttöä. Noudata tuotetta joka hetki. Käytä tuotteen ainoastaan kohdassa [Intended use](#) sivulla 14 kuvatulla tavalla.

### Käyttötarkoitus

Allied Vision-tuotteen käyttötarkoitus on integrointi kuvajärjestelmiin ammattilaisten toimesta. Kaikki Allied Vision-tuotteet myydään B2B-ympäristössä.

## FR - Français

### Sécurité

Veuillez lire ces consignes de sécurité avant d'utiliser le produit. Respectez continuellement les avertissements. Utilisez le produit uniquement comme indiqué sous [Intended use](#), page 14.

### Utilisation prévue

L'utilisation prévue du produit Allied Vision est son intégration dans des systèmes de vision par le soin de professionnels. Tout produit Allied Vision est vendu dans un cadre B2B.

## HE - עברית

### בטיחות

לפני השימוש במוצר, עליך לקרוא את הוראות הביטחון האלו. עליך לממש הוראות ביטחון אלו תמיד. השימוש במצלמה הוא רק לפי מה שכתוב ב"כוונת השימוש" ([Intended use](#) בעמוד 14).

### שימוש מיועד

מוצרי AlliedVision מיועדים לשילוב במערכות ממוחשבת לעיבוד צילומים ע"י אנשי מקצוע. כל מוצרי AlliedVision נמכרים לשימוש בסביבת B2B.

## IT - Italiano

### Sicurezza

Leggere queste istruzioni per la sicurezza prima di utilizzare il prodotto. Osservare sempre tutte le avvertenze. Utilizzare il prodotto come descritto alla sezione [Intended use](#) a pagina 14.

### Uso previsto

Il prodotto Allied Vision è concepito per essere integrato in sistemi di monitoraggio in campo professionale. Tutti i prodotti Allied Vision sono venduti in uno scenario B2B.

## JA - 日本語

### 安全性

本製品を使用する前に、この安全ガイドをお読みください。警告を必ず守ってください。必ず21ページの[Intended use](#) 14 ページに従って使用してください。

### 用途

Allied Vision製品は、専門家が視覚装置に統合することを意図したものです。すべてのAllied Vision製品は、企業間取り引き用に販売されています。

## NL - Nederlands

### Veiligheid

Lees deze veiligheidsinstructies voordat u het product gebruikt. Neem deze waarschuwingen altijd in acht. Gebruik het product uitsluitend, zoals aangegeven in het [Intended use](#) op pagina 14.

### Beoogd gebruik

Het beoogde gebruik van het Allied Vision-product is de integratie in optische systemen door professionals. Alle Allied Vision-producten worden verkocht in de B2B-markt.

## NO - Norsk

### Sikkerhet

Les disse sikkerhetsinstruksene før du bruker produkt. Følg advarslene til en hver tid. Bruk kun produkt i samsvar med [Intended use](#) på side 14.

### Tiltenkt bruk

Den tiltenkte bruken av Allied Vision-produktet er integrering i visjonssystemer av profesjonelle. Alle Allied Vision-produkter selges i en forretning til forretning-situasjon.

## SV - Svenska

### Säkerhet

Läs igenom säkerhetsinstruktionerna innan du använder produkten. Var hela tiden särskilt uppmärksam på varningarna. Använd enbart produkten på det sätt som anges i [Intended use](#) på sida 14.

### Avsedd användning

Den avsedda användningen av Allied Vision-produkter är integrering i visionssystem av fackmän. Samtliga Allied Vision-produkter säljs i en B2B-miljö.

## ZH - 简体中文版

### 安全需知

在使用产品之前，请阅读这些安全说明。请务必遵守相关警告和 [Intended use](#) 于第 14 页。

### 预期用途

Allied Vision 产品的预期用途是由专业人士整合到视觉系统中。所有 Allied Vision 的产品均通过 B2B 渠道销售。

# This document at a glance



Get an overview of documentation for HSD STP cables:

Note.....	8
What else do you need? .....	8

## Note



### Read this document carefully

Learn to use HSD STP cables in the most safe and efficient way and avoid damage to your embedded system.

## What else do you need?

This is a selection of helpful downloads:

Download	Link
<b>Documentation</b> for installation and operation: <ul style="list-style-type: none"> <li>• Alvium FP3/GM2 User Guide</li> <li>• Alvium CSI-2 Cameras User Guide</li> <li>• User guides for deserializer boards</li> </ul>	<a href="http://www.alliedvision.com/en/support/technical-documentation/alvium-csi-2-documentation/">www.alliedvision.com/en/support/technical-documentation/alvium-csi-2-documentation/</a>
<b>Accessories</b> , such as HSD STP cables, FPC cables, I/O cables, lenses, and tripod adapters	<a href="http://www.alliedvision.com/en/products/accessories">www.alliedvision.com/en/products/accessories</a>
<b>SerDes Configurator:</b> Please contact the Allied Vision Support team at...	<a href="http://www.alliedvision.com/en/about-us/contact-us/technical-support-repair/-rma">www.alliedvision.com/en/about-us/contact-us/technical-support-repair/-rma</a>

Table 1: Downloads for HSD STP cables

# Contact us

## Website, email

### General

[www.alliedvision.com/en/contact](http://www.alliedvision.com/en/contact)

[info@alliedvision.com](mailto:info@alliedvision.com)

### Distribution partners

[www.alliedvision.com/en/avt-locations/avt-distributors](http://www.alliedvision.com/en/avt-locations/avt-distributors)

### Support

[www.alliedvision.com/en/support](http://www.alliedvision.com/en/support)

[www.alliedvision.com/en/about-us/contact-us/technical-support-repair-/-rma](http://www.alliedvision.com/en/about-us/contact-us/technical-support-repair-/-rma)

## Offices

### Europe, Middle East, and Africa (Headquarters)

Allied Vision Technologies GmbH  
Taschenweg 2a  
07646 Stadtroda, Germany  
T// +49 36428 677-0 (Reception)  
T// +49 36428 677-230 (Sales)  
F// +49 36428 677-28

### North, Central, and South America, Canada

Allied Vision Technologies Canada Inc.  
300 – 4621 Canada Way  
Burnaby, BC V5G 4X8, Canada  
T// +1 604 875 8855

### USA

Allied Vision Technologies, Inc.  
102 Pickering Way- Suite 502  
Exton, PA 19341, USA  
Toll-free// +1-877-USA-1394  
T// +1 978 225 2030

### Asia-Pacific

#### China

Allied Vision Technologies Shanghai Co Ltd.  
B-510, Venture International Business Park  
2679 Hechuan Road  
Minhang District, Shanghai 201103  
People's Republic of China  
T// +86 21 64861133

#### Japan

Allied Vision Technologies  
Yokohama Portside Bldg. 10F  
8-1 Sakae-cho, Kanagawa-ku  
Yokohama-shi, Kanagawa, 221-0052  
T// +81 (0) 45 577 9527

### Singapore

Allied Vision Technologies Asia Pte. Ltd  
82 Playfair Rd, #07-01 D'Lithium  
Singapore 368001  
T// +65 6634 9027

# Contents

Read before use .....	2
This document at a glance .....	7
Note .....	8
What else do you need? .....	8
Contact us .....	9
Document history and conventions .....	11
Document history .....	12
Conventions used in this user guide .....	12
Typographical styles .....	12
Symbols and notes .....	12
Compliance, safety, and intended use .....	13
Compliance notifications .....	14
Intended use .....	14
Copyright and trademarks .....	14
Product safety .....	15
Electrical connections .....	15
Specifications .....	18
Specifications overview .....	19
Technical drawing .....	19
Connector pin assignment .....	20
Connecting HSD STP cables .....	21
Precautions .....	22
HSD STP cable-side connectors .....	22
Instructions for connecting .....	23
Instructions for disconnecting .....	23

# Document history and conventions



This chapter includes:

Document history .....	12
Conventions used in this user guide.....	12
Symbols and notes .....	12

## Document history

Version	Date	Remarks
V1.0.3	2025-Jul-10	<ul style="list-style-type: none"> <li>Removed UKCA logo from <a href="#">Compliance notifications</a> on page 14.</li> <li>Removed contents for ISO 13485 and updated definitions for <a href="#">Intended use</a> on page 14.</li> </ul>
V1.0.2	2024-Jul-15	Updated addresses in <a href="#">Contact us</a> on page 9.
V1.0.1	2024-Mar-15	Added UKCA symbol in <a href="#">Compliance notifications</a> on page 14.
V1.0.0	2023-Sep-27	Release version

Table 2: Document history

## Conventions used in this user guide

To give this user guide an easily understood layout and to emphasize important information, the following typographical styles and symbols are used:

### Typographical styles

Style	Function
<b>Emphasis</b>	Highlighting important things
<a href="#">Web links and references</a>	Links to webpages and internal cross references

Table 3: Typographical styles

### Symbols and notes



#### NOTICE

##### Material damage

Precautions are described.



##### Practical tip

Additional information helps to understand or ease handling the camera and components.



##### Additional information

Web link or reference to an external source with more information is shown.

 
# Compliance, safety, and intended use



This chapter includes:

Compliance notifications .....	14
Intended use .....	14
Copyright and trademarks .....	14
Product safety .....	15

## Compliance notifications



National regulations on disposal must be followed.

## Intended use

Allied Vision's objective is the development, design, production, maintenance, servicing and distribution of digital cameras and components for image processing. We are offering standard products as well as customized solutions.

Intended use of Allied Vision product is the integration into Vision systems by professionals. All Allied Vision product is sold in a B2B setting.

Unless expressly agreed otherwise, we design, manufacture, and supply in accordance with the standards of the machine vision industry.

In the event of requirements going beyond this, the customer must:

- Notify us of the special use for each model before the first order is placed so that the models in question can be separated out from the standard processes using their own part numbers, and
- Conclude a quality assurance agreement with us prior to purchasing, to define its requirements in a legally secure manner.

This may require a surcharge, as our prices are very tightly tailored to standard requirements.

## Copyright and trademarks

All text, pictures, and graphics are protected by copyright and other laws protecting intellectual property. All content is subject to change without notice.

All trademarks, logos, and brands cited in this document are property and/or copyright material of their respective owners. Use of these trademarks, logos, and brands does not imply endorsement.

Copyright © 2025 Allied Vision Technologies GmbH. All rights reserved.

## Product safety

To prevent material damage, read the following to understand risks in using HSD STP cables.

### Electrical connections

FPD-Link III and GMSL2 do not specify electrical connections as extensively as the USB or GigE standard. Plug and play is not supported. Read specifications carefully.

Components can easily be damaged. If you are unfamiliar with FPD-Link III and GMSL2 connections or with embedded systems, be extremely careful. Follow the instructions in the Alvium FP3/GM2 User Guide.

Allied Vision accessories help to avoid damage to the camera and connected components.



#### Compatible accessories

We recommend using accessories by Allied Vision, see [www.alliedvision.com/en/products/accessories](http://www.alliedvision.com/en/products/accessories).

### Strain relief for all cable connections

If HSD STP connectors are exposed to excessive stress, they can break off from devices.

Provide sufficient strain relief for all cable connections to avoid malfunctions and damage to electronics by wrong polarity and short circuits. To protect cameras and connected components, secure cables as shown in [Figure 1](#).

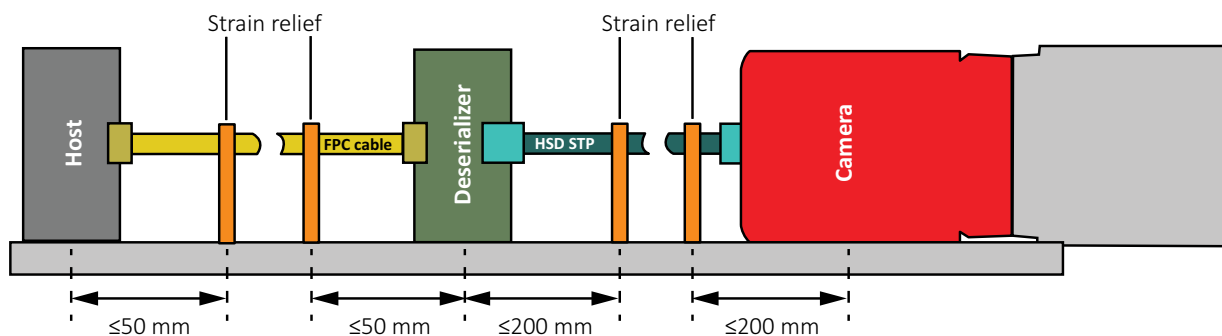 


Figure 1: Strain relief for all cable connections

## HSD STP connectors and cables

HSD STP connectors enable a robust connection. However, if the cable is overstressed, these connectors can break off from devices.

- Unlock the cable connector while you are disconnecting devices.
- Avoid stress to HSD STP connectors and cables.
- Observe the minimum bending radius for HSD STP cables: See [Specifications overview](#) on page 19.
- Observe instructions for [Strain relief for all cable connections](#) on page 15.
- Follow the instructions in [Precautions](#) on page 22.



Figure 2: HSD STP connectors on cameras (left) and on cables (right)



### Additional information

For technical data and more instructions on HSD STP connector Code Z (water blue) and cables, see the manufacturer data sheet at [www.rosenberger.com](http://www.rosenberger.com).

## No hot-plugging for FPD-Link III and GMSL2

Alvium FP3/GM2 STP cameras do not support hot-plugging. Hot-plugging can destroy the camera and connected hardware by high inrush current.

Disconnect power supplies before connecting or disconnecting devices from each other.

## Signal quality

Noise and electromagnetic interference can disable camera functions.

- Avoid squeezing cables and bending cables over edges.
- Avoid contact to metal surfaces, causing electromagnetic interference.
- Please use cables recommended by Allied Vision.

## Ground loops

Unsuitable connections can lead to different potentials between the camera system GND and the environmental shield/chassis GND caused by ground loops. This can damage the camera and the connected devices or cause malfunctions.

- Avoid potential differences between the camera housing and GND.
- All wiring must be done by authorized personnel, according to the corresponding technical standards.
- You may mount the camera electrically isolated.
- Read the Avoiding Ground Loops in Vision Systems application note.



### More information

See the Avoiding Ground Loops in Vision Systems application note at [www.alliedvision.com/en/support/technical-documentation/alvium-csi-2-documentation](http://www.alliedvision.com/en/support/technical-documentation/alvium-csi-2-documentation).

# Specifications



This chapter includes:

Specifications overview.....	19
Technical drawing.....	19
Connector pin assignment.....	20

## Specifications overview

Feature	Specification
Product codes	18405: 5 m 18406: 10 m
Cable material	LEONI Dacar 535
Cable length	18405: 5 m ± 15 mm 18406: 10 m ± 20 mm
Cable thickness	~ 4.6 mm ± 0.2 mm
Connector type	HSD STP Code Z (water blue)
Classification	Industrial grade for static applications
Static bending radius (min.)	13.8 mm (1 time bending)
Dynamic bending radius (min.)	46 mm (<100 times bending)
Shielding	Impedance controlled (100 Ω)
Compatible connector	HSD STP Code Z (water blue)
Supported devices	Alvium FP3/GM2 STP cameras and compatible deserializers
Operating temperature range	-40 °C to +105 °C

Table 4: HSD STP cables specifications overview



### Additional information

For technical data and more instructions on the HSD STP connector Code Z (water blue) and on LEONI Dacar cable material, see the manufacturer data sheets at [www.rosenberger.com](http://www.rosenberger.com).

## Technical drawing



Figure 3: HSD STP cables technical drawing

## Connector pin assignment

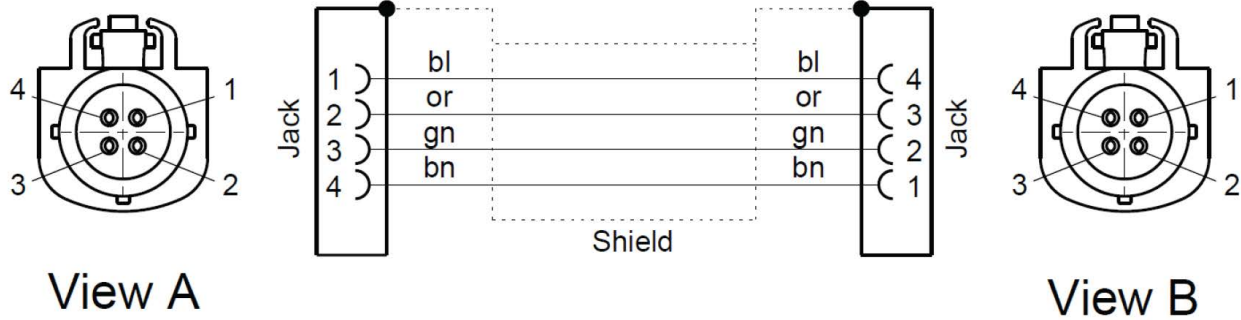 


Figure 4: HSD STP connector pin assignment

# Connecting HSD STP cables



This chapter includes basic instructions for connecting HSD STP cables:

Precautions.....	22
HSD STP cable-side connectors.....	22
Instructions for connecting.....	23
Instructions for disconnecting.....	23

## Precautions

The robust HSD STP connectors are optimized for one-time plugging in the automotive industry. Unplugging cable connectors is uncomfortable, which may lead to material damage. Please follow the instructions in this section.



### NOTICE

#### Damage to cameras and connected peripherals

If HSD STP connectors are exposed to excessive stress, they can break off from the corresponding device.

- Secure HSD STP cables at maximum 200 mm off the connected device.
- See [Strain relief for all cable connections](#) on page 15.
- Follow the instructions below for HSD STP cables.

## HSD STP cable-side connectors

Figure 5 shows the latch of the locking mechanism of the HSD STP cable-side connectors in unlocked position (schematics):

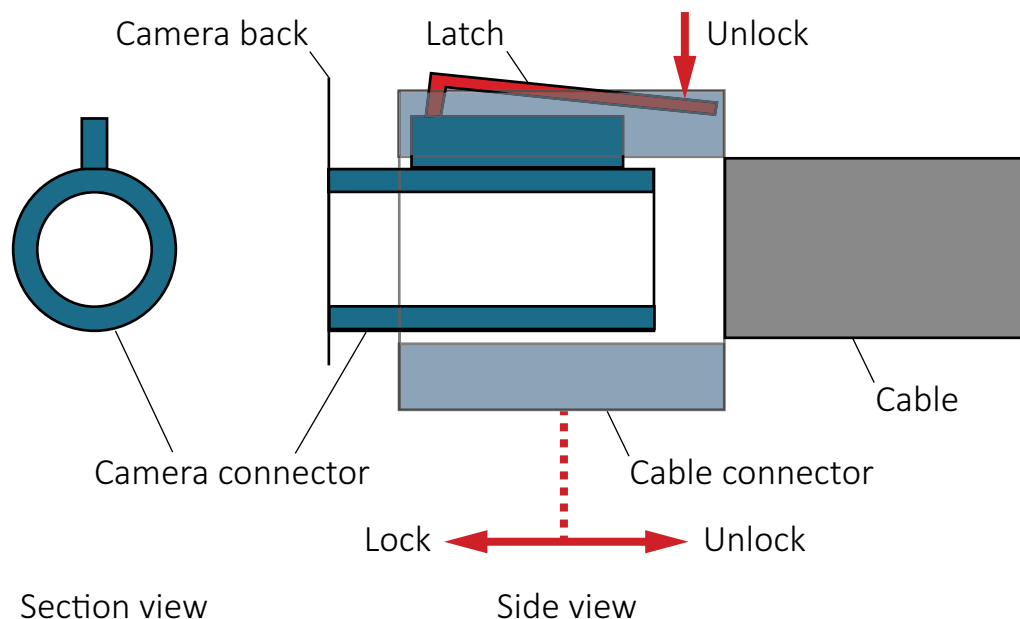 


Figure 5: HSD STP cable-side connector: Locking mechanism

The cable-side connector has a locking mechanism that must be engaged for safe connection. To unplug the cable-side connector, the lever must be **pressed all the time while** the cable is pulled off the device's connector. Otherwise, the device's connector can be torn off the device.

## Instructions for connecting

1. Grab the device (the camera in this example) with one hand and the cable-side connector with the other hand.
2. Align the groove (b) of the cable-side connector with the notch (a) of the device's connector.

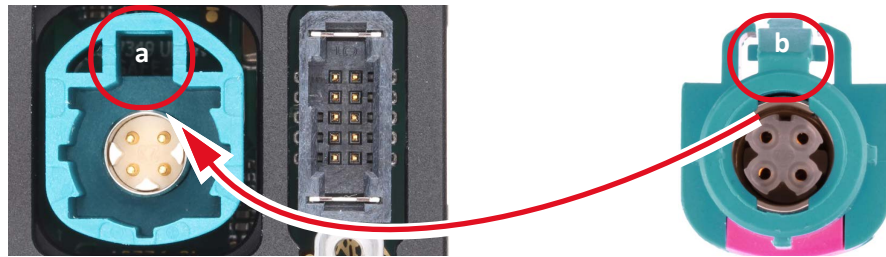 


Figure 6: HSD STP connectors on cameras (left) and on cables (right)

3. Push the cable-side connector over the device's connector until it clicks. The device is connected properly.

## Instructions for disconnecting

1. Grab the device with one hand and the cable-side connector with the other hand.
2. With your fingernail, press down the latch (c) of the cable-side connector.



### NOTICE

#### Damage to cameras and connected peripherals

If the HSD STP connectors are exposed to excessive stress, they can break off from devices.

Keep the latch (c) pressed down until the cable has been completely disconnected from the device.

3. **Keeping the latch (c) pressed down**, pull the cable-side connector off the device. You may slightly rotate and tilt the cable-side connector against the device to reduce friction.

The device is disconnected.



Figure 7: Pressing down the latch (c) of the HSD STP connector